


## Electric window lifters


from January 1988

### Position of relays

Relay plate with fuse holder:

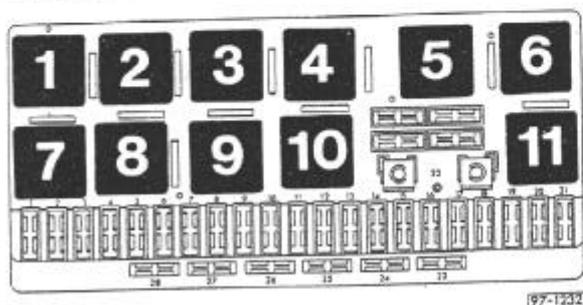


### Identification of connections

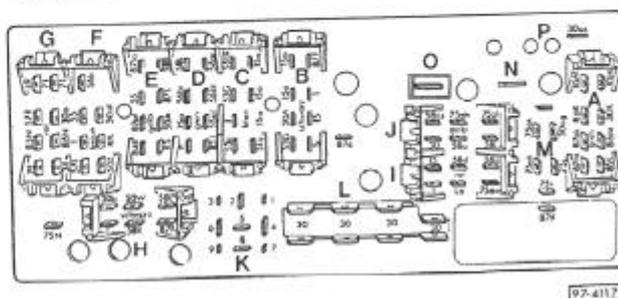

- A - Multiple connector (grey) for wiring loom, air conditioner
- B - Multiple connector (black) for wiring loom, front right
- C - Multiple connector (blue) for wiring loom, dashboard
- D - Multiple connector (green) for wiring loom, front left
- E - Multiple connector (yellow) for wiring loom, front left
- F - Multiple connector (brown) for wiring loom, dashboard
- G - Multiple connector (red) for wiring loom, dashboard
- H - Multiple connector (black) for wiring loom, rear
- I - Multiple connector (red) for wiring loom, dashboard
- J - Multiple connector (yellow) for wiring loom, dashboard
- K - Multiple connector (black) for relay socket 3
- L - Single connector - terminal 30
- M - Single connector for various optional extras
- N - Single connector - output, glow plugs
- O - Single connector - output, intake manifold preheating
- P - Single connector - output, fuse no. 20

### Additional relay carrier:

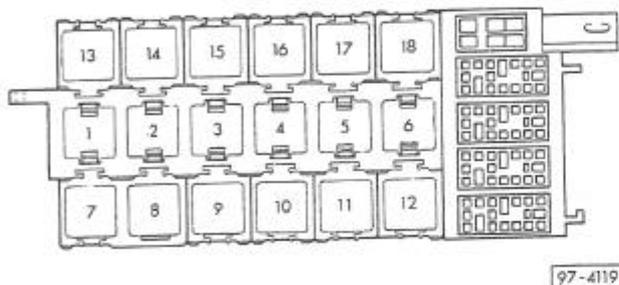


### Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige

- 10 } Control unit for window lifter and sliding roof
- 11 }
- 14 Thermo fuse for window lifter

Electric window lifters


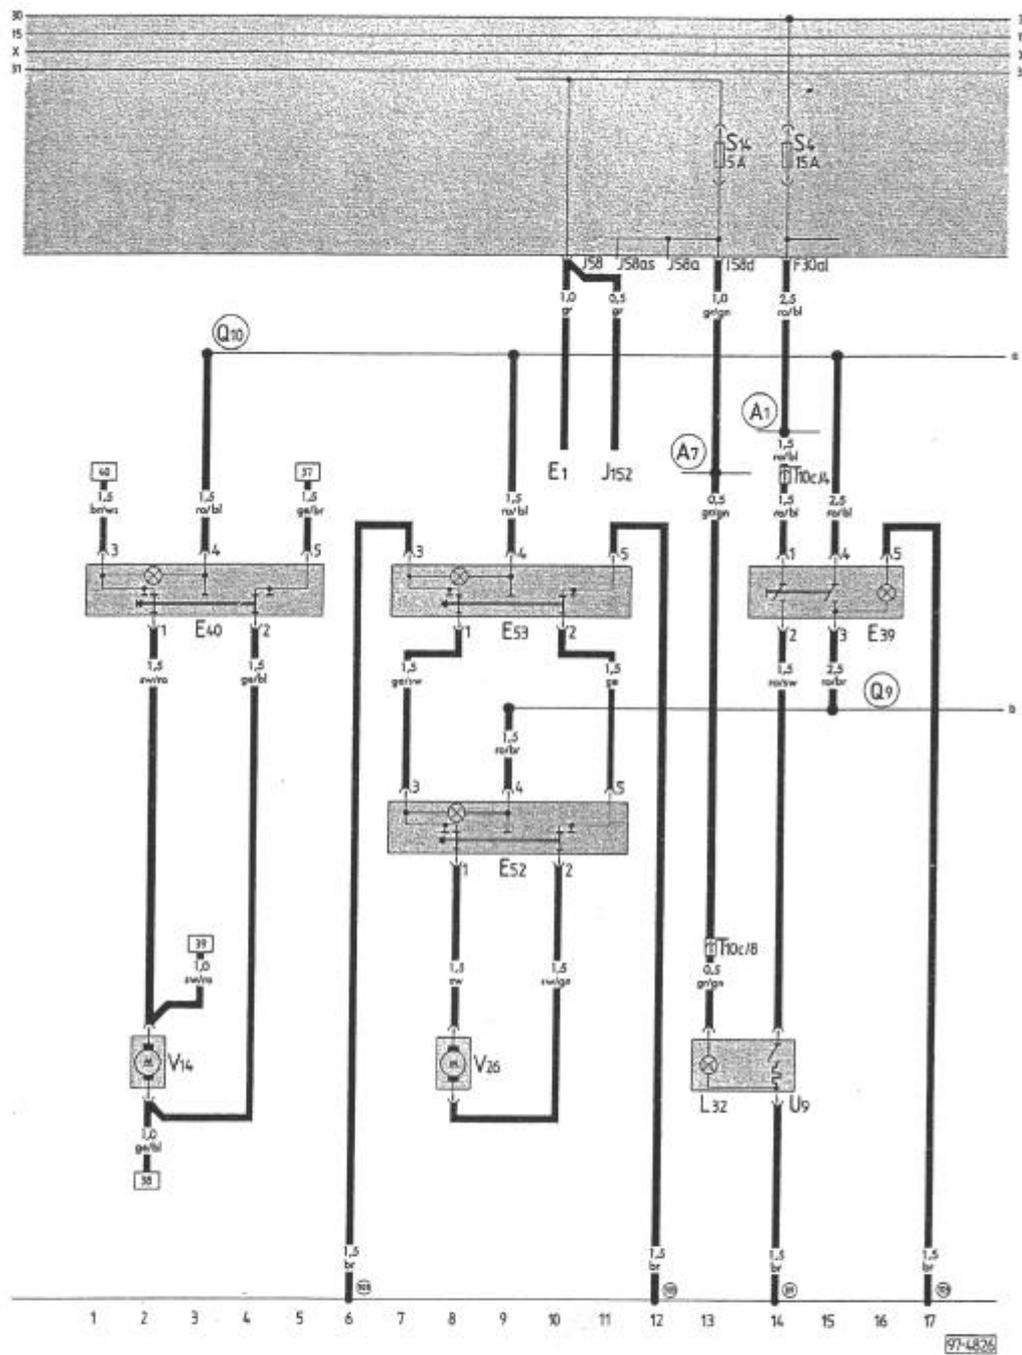


- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 1 - Lighting switch
- E 39 - Rear window lifter safety switch
- E 40 - Window lifter switch, left
- E 52 - Rear left window lifter switch (in door)
- E 53 - Rear left window lifter switch (in console)
- J 152 - Buzzer for side lights and radio
- L 32 - Rear cigarette lighter light bulb
- T 10c - Connector 10 pin, black, behind dash panel
- U 9 - Cigarette lighter rear
- V 14 - Window lifter motor, left
- V 26 - Window lifter motor, rear left

- (88) - Earth connection, in window lifter wiring loom
- (102) - Earth connection, in window lifter/central locking and door contact switch wiring loom
- (A1) - Positive (+) connection (30a), in dash panel wiring loom
- (A7) - Positive (+) connection (58 D1), in dash panel wiring loom
- (99) - Connection in window lifter wiring loom
- (100) - Positive (+) connection (87), in window lifter/central locking and door contact switch wiring loom

Electric window lifters

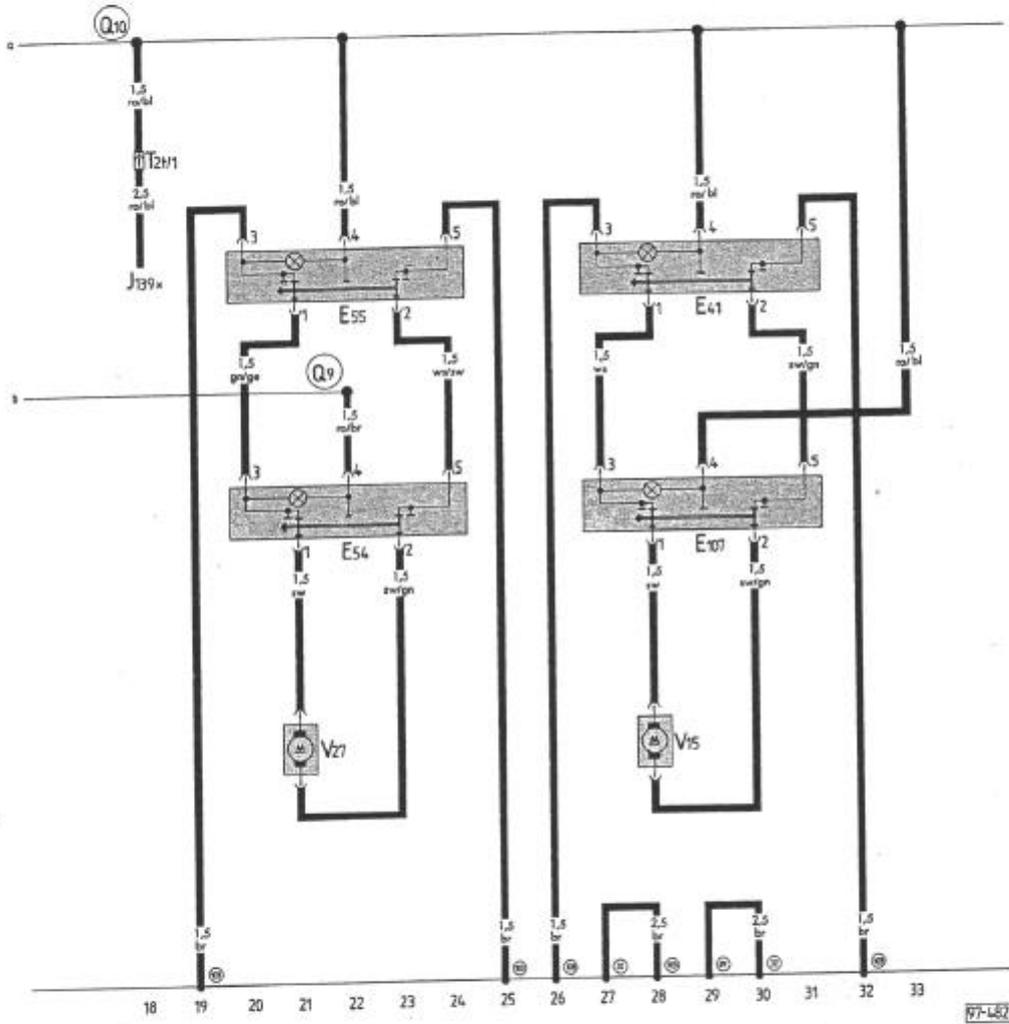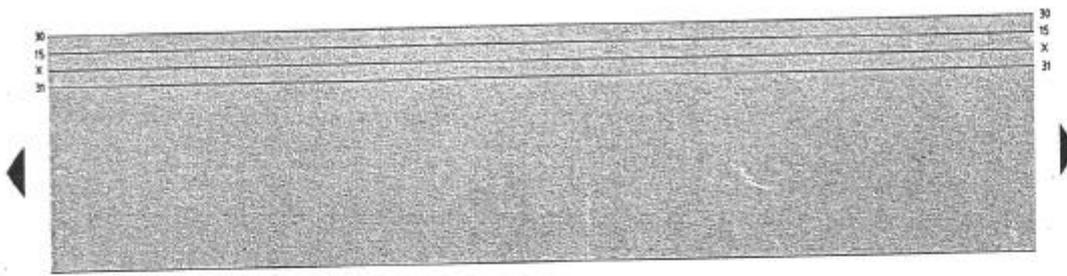


- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 41 - Window lifter switch, right
- E 54 - Rear right window lifter switch (in door)
- E 55 - Rear right window lifter switch (in console)
- E 107 - Switch for window lifter (in passenger's door)
- J 139 - Switch unit for window lifter and sliding roof
- T 21 - Connector 2 pin, green, behind dash panel
- V 15 - Window lifter motor, right
- V 27 - Window lifter motor, rear right

- 32 - Earth point, behind dash panel, left
- 88 - Earth connection, in window lifter wiring loom
- 100 - Earth connection, in window lifter/central locking and door contact switch wiring loom
- 99 - Connection in window lifter wiring loom
- 010 - Positive (+) connection (87), in window lifter/central locking and door contact switch wiring loom

\* - only with electrically operated sliding roof

Electric window lifters

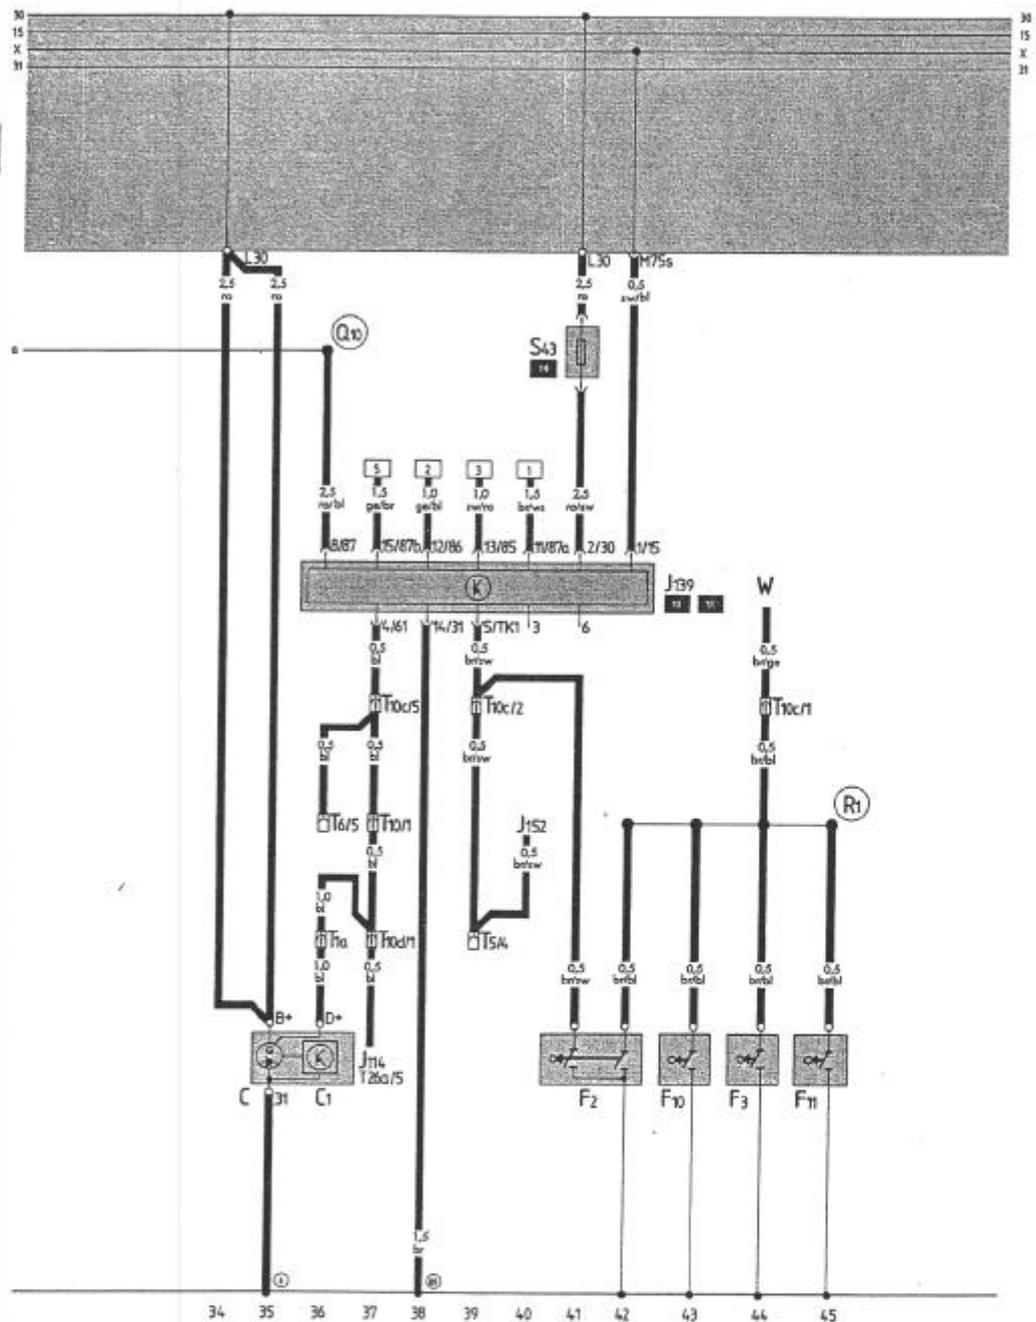

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- C - Alternator
- C 1 - Voltage regulator
- F 2 - Front left door contact switch with buzzer contact
- F 3 - Front right door contact switch
- F 10 - Rear left door contact switch
- F 11 - Rear right door contact switch
- J 114 - Oil pressure warning control unit
- J 139 - Switch unit for window lifter and sliding roof
- J 152 - Buzzer for side lights and radio
- S 43 - Window lifter thermo fuse (in aux. relay carrier)
- T 1a - Connector single, engine compartment, right
- T 5 - Connector 5 pin, black, behind dash panel
- T 6 - Connector 6 pin, red, behind dash panel
- T 10 - Connector 10 pin, blue, behind dash panel

- T 10c - Connector 10 pin, black, behind dash panel
- T 10d - Connector 10 pin, yellow, behind dash panel
- T 26a - Connector 26 pin, brown, dash panel insert
- W - Interior light, front
- (88) - Earth connection, in window lifter wiring loom
- (90) - Positive (+) connection (87), in window lifter/central locking and door contact switch wiring loom
- (91) - Connection (door contact switch, right), in window lifter/central locking and door contact switch wiring loom