


**Avant**


from January 1988

**Position of relays**  
Relay plate with fuse holder:

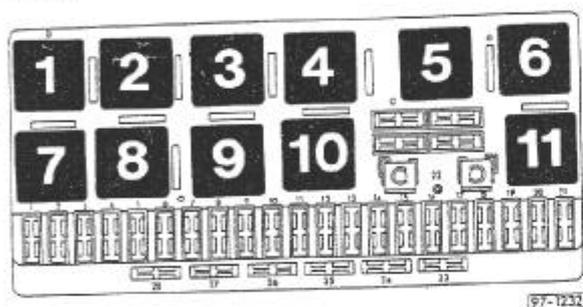


- 4 - Headlight washer system relay
- 8 - Intermittent wash/wipe relay

**Identification of connections**

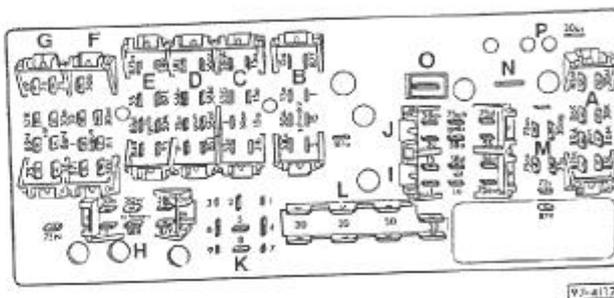

- A - Multiple connector (grey) for wiring loom, air conditioner
- B - Multiple connector (black) for wiring loom, front right
- C - Multiple connector (blue) for wiring loom, dashboard
- D - Multiple connector (green) for wiring loom, front left
- E - Multiple connector (yellow) for wiring loom, front left
- F - Multiple connector (brown) for wiring loom, dashboard
- G - Multiple connector (red) for wiring loom, dashboard
- H - Multiple connector (black) for wiring loom, rear
- I - Multiple connector (red) for wiring loom, dashboard
- J - Multiple connector (yellow) for wiring loom, dashboard
- K - Multiple connector (black) for relay socket 3
- L - Single connector - terminal 30
- M - Single connector for various optional extras
- N - Single connector - output, glow plugs
- O - Single connector - output, intake manifold preheating
- P - Single connector - output, fuse no. 20

**Additional relay carrier:**

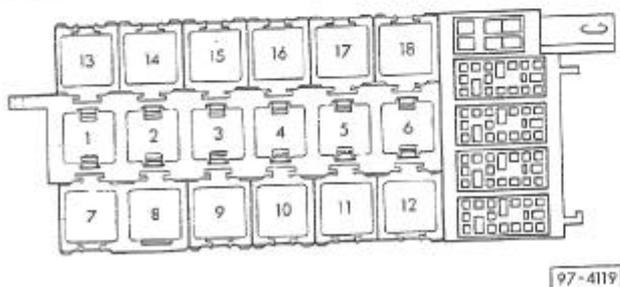


- 12 - Rear window wiper/washer relay

**Fuse colours**

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige



Avant

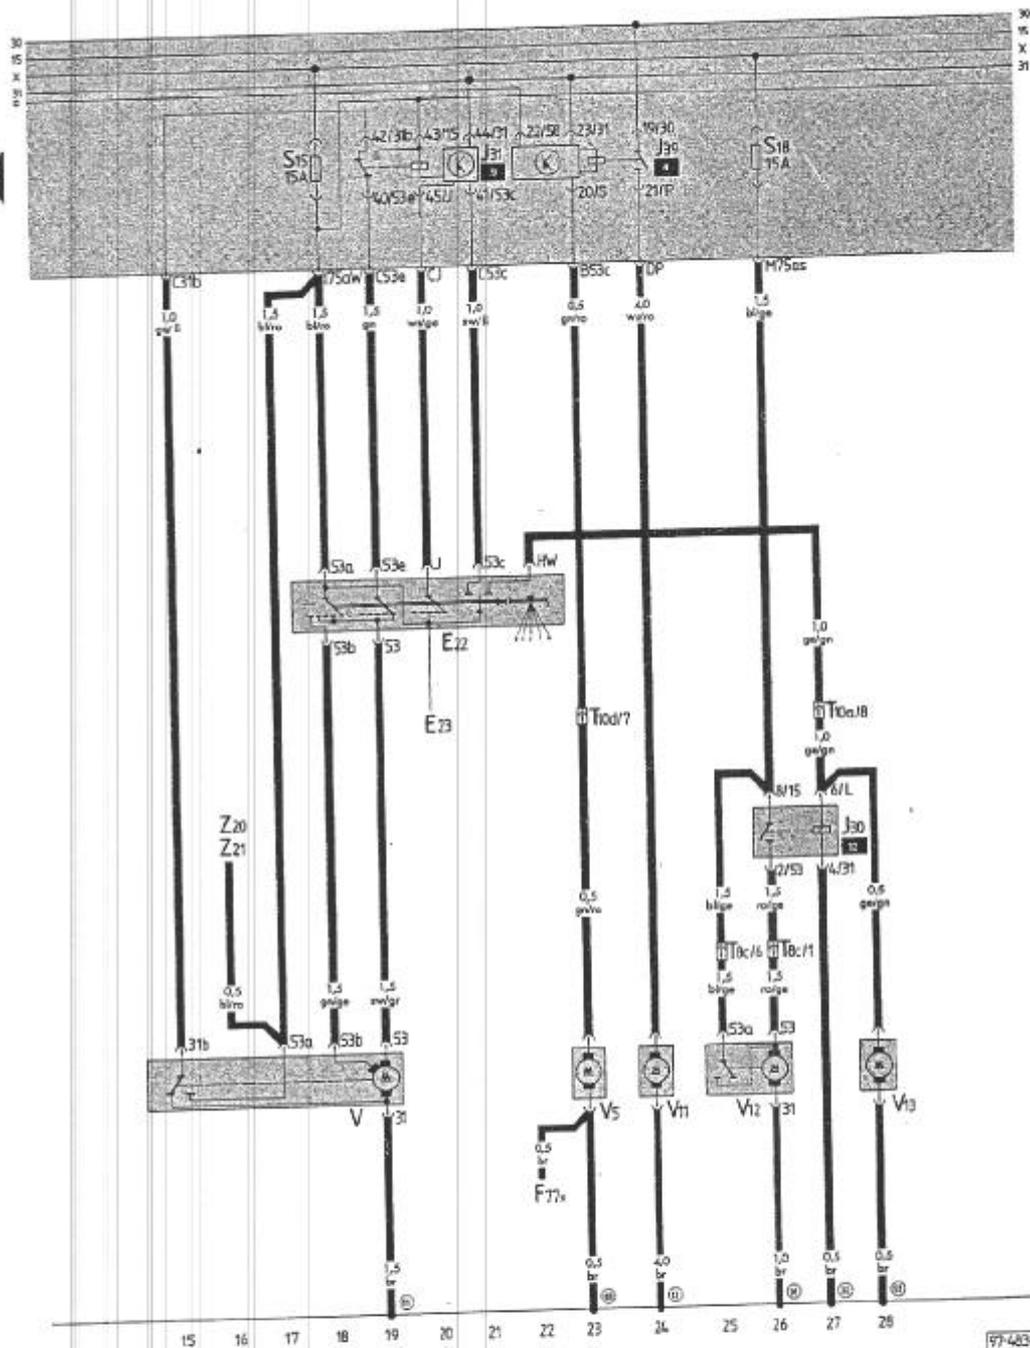

- bl = blue
- br = brown
- ge = yellow
- gr = green
- gr = grey
- ll = purple
- ro = red
- sw = black
- ws = white

- E 22 - Intermittent wiper switch
- E 23 - Fog light and rear fog light switch
- F 77 - Warning contact for windscreen washer water
- J 30 - Rear window wiper/washer relay
- J 31 - Intermittent wash/wipe relay
- J 39 - Headlight washer system relay
- T 8c - Connector 8 pin, black, in luggage compartment, left
- T 10a - Connector 10 pin, brown, behind dash panel
- T 10d - Connector 10 pin, yellow, behind dash panel
- V - Windscreen wiper motor
- V 5 - Windscreen washer pump
- V 11 - Headlight washer pump
- V 12 - Rear wiper motor
- V 13 - Rear window washer pump

- Z 20 - Heating for left washer jet
- Z 21 - Heating for right washer jet
- (12) - Earth point, in engine compartment, left
- (32) - Earth point, behind dash panel, left
- (32) - Earth point, in tailgate, left
- (81) - Earth connection, in dash panel wiring loom
- (93) - Earth connection, in front right wiring loom
- (98) - Earth connection, in tailgate wiring loom

\* - only with 5-cylinder turbo (petrol engine)