



# Radio, stereo with amplifier

from July 1988

**Position of relays**  
Relay plate with fuse holder:

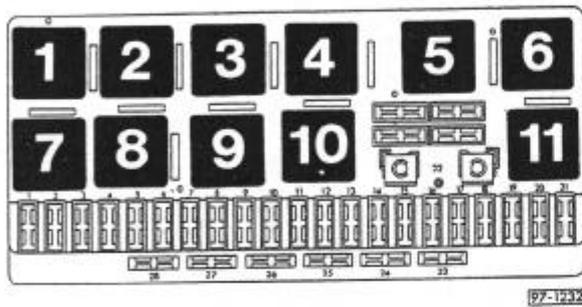


**Identification of connections**

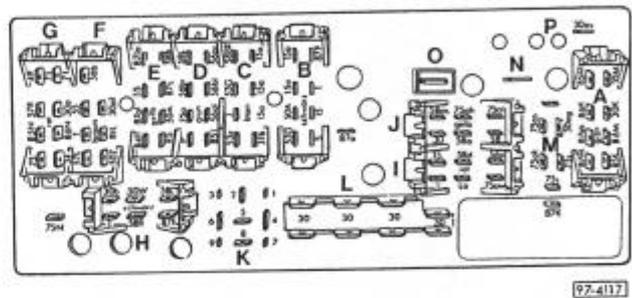

- A - Multiple connector (grey) for wiring loom, air conditioner
- B - Multiple connector (black) for wiring loom, front right
- C - Multiple connector (blue) for wiring loom, dashboard
- D - Multiple connector (green) for wiring loom, front left
- E - Multiple connector (yellow) for wiring loom, front left dashboard
- F - Multiple connector (brown) for wiring loom, dashboard
- G - Multiple connector (red) for wiring loom, dashboard
- H - Multiple connector (black), for wiring loom, rear
- I - Multiple connector (red) for wiring loom, dashboard
- J - Multiple connector (yellow) for wiring loom, dashboard
- K - Multiple connector (black) for relay socket 3
- L - Single connector - terminal 30
- M - Single connector for various optional extras
- N - Single connector - output, glow plugs
- O - Single connector - output, intake manifold preheating
- P - Single connector - output, fuse no. 20

**Additional relay carrier:**

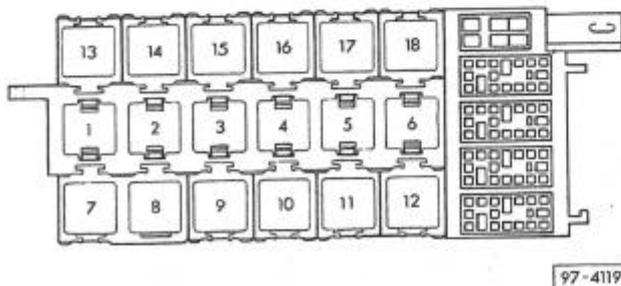


**4** - Buzzer for side lights and radio

**Fuse colours**

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige

Radio, stereo with amplifier


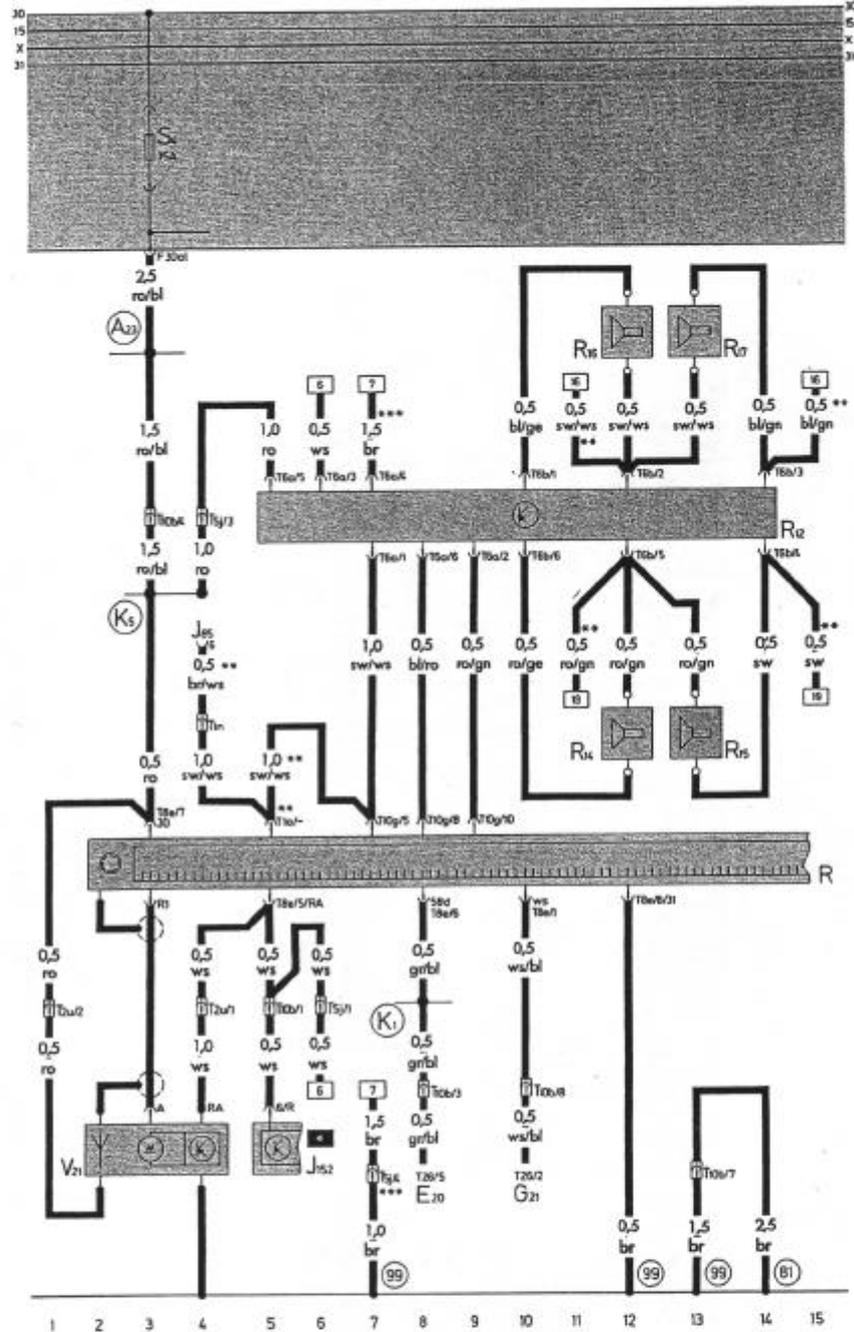


- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

- E 20 - Instrument/dash panel lighting control
- G 21 - Speedometer
- J 85 - Alarm system control unit
- J 152 - Buzzer for side lights and radio
- R - Connection for radio/radio with incorporated fader control
- R 12 - Amplifier
- R 14 - Treble loudspeaker rear left
- R 15 - Bass loudspeaker rear right
- R 16 - Treble loudspeaker rear right
- R 17 - Bass loudspeaker rear right
- S 4 - Fuse in relay plate
- T 1a - Connector single, brown, behind radio
- T 1n - Connector single, behind radio
- T 2u - Connector 2 pin, behind console
- T 5j - Connector 5 pin, yellow, behind console
- T 6a - Connector 6 pin, black, behind dash panel
- T 6b - Connector 6 pin, black, behind dash panel
- T 8e - Connector 8 pin, behind console

- T 10b - Connector 10 pin, brown, behind console
- T 10g - connector 10 pin, behind console
- T 26 - Connector 26 pin, black, behind dash panel insert
- V 21 - Aerial motor
- (81) - Earth connection - 1 -, in dash panel wiring loom
- (99) - Earth connection, in console wiring loom
- (A23) - Connection (30a1), in dash panel wiring loom
- (K5) - Positive (+) connection (30a1), in console wiring loom
- (K1) - Positive (+) connection (58), in console wiring loom

Radio, stereo with amplifier

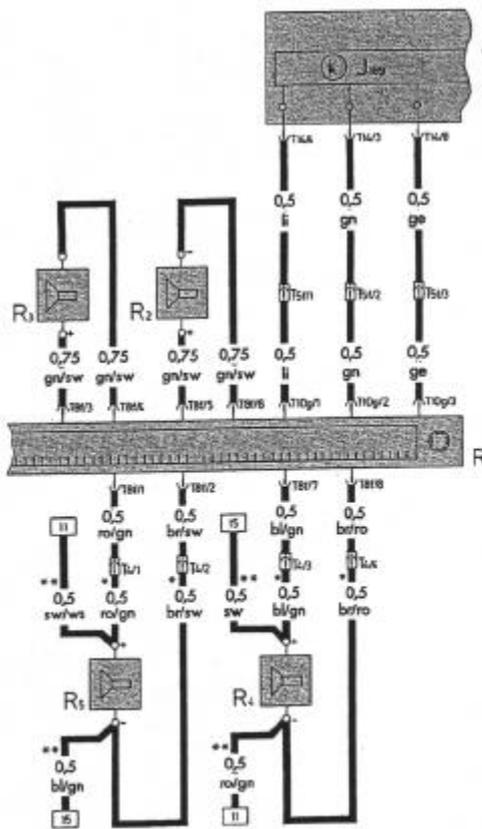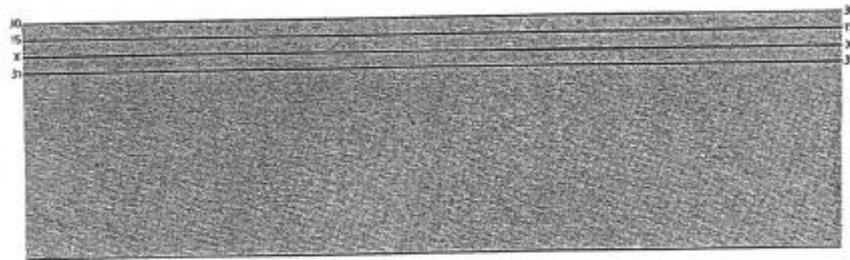

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

16 17 18 19 20 21 22

97-5707

- J 189 - Auto-check system
- R - Connection for radio/radio with incorporated fader control
- R 2 - Front left loudspeaker
- R 3 - Front right loudspeaker
- R 4 - Rear left loudspeaker
- R 5 - Rear right loudspeaker
- T 4 - Connector, 4 pin, behind radio
- T 5f - Connector 8 pin, behind radio
- T 10g - Connector 10 pin, brown, behind dash panel
- T 14 - Connector 14 pin, black, behind dash panel insert
- \* - only Audi 100 without active loudspeakers
- \*\* - only Audi 100 with active loudspeakers