


Anti-theft alarm system

from July 1988

Position of relays


Relay plate with fuse holder:

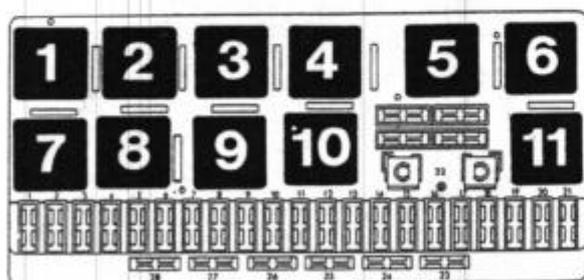

97-1232

8 - Automatic gearbox relay


Additional relay carrier:

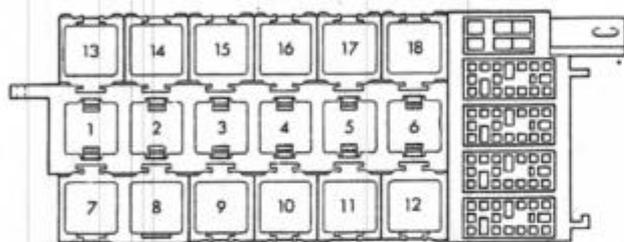

97-4119

3 - Control unit for interior light with delay

Identification of connections

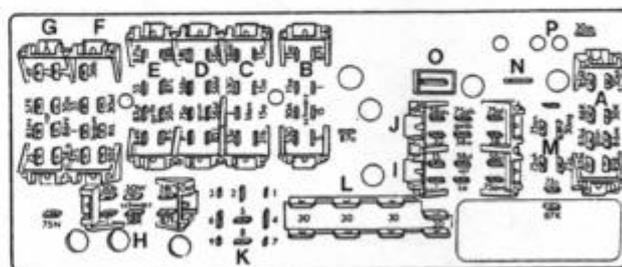


97.4117

- A - Multiple connector (grey) for wiring loom, air conditioner
- B - Multiple connector (black) for wiring loom, front right
- C - Multiple connector (blue) for wiring loom, dashboard
- D - Multiple connector (green) for wiring loom, front left
- E - Multiple connector (yellow) for wiring loom, front left
- F - Multiple connector (brown) for wiring loom, dashboard
- G - Multiple connector (red) for wiring loom, dashboard
- H - Multiple connector (black), for wiring loom, rear
- I - Multiple connector (red) for wiring loom, dashboard
- J - Multiple connector (yellow) for wiring loom, dashboard
- K - Multiple connector (black) for relay socket 3
- L - Single connector - terminal 30
- M - Single connector for various optional extras
- N - Single connector - output, glow plugs
- O - Single connector - output, intake manifold preheating
- P - Single connector - output, fuse no. 20

Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige

Anti-theft alarm system

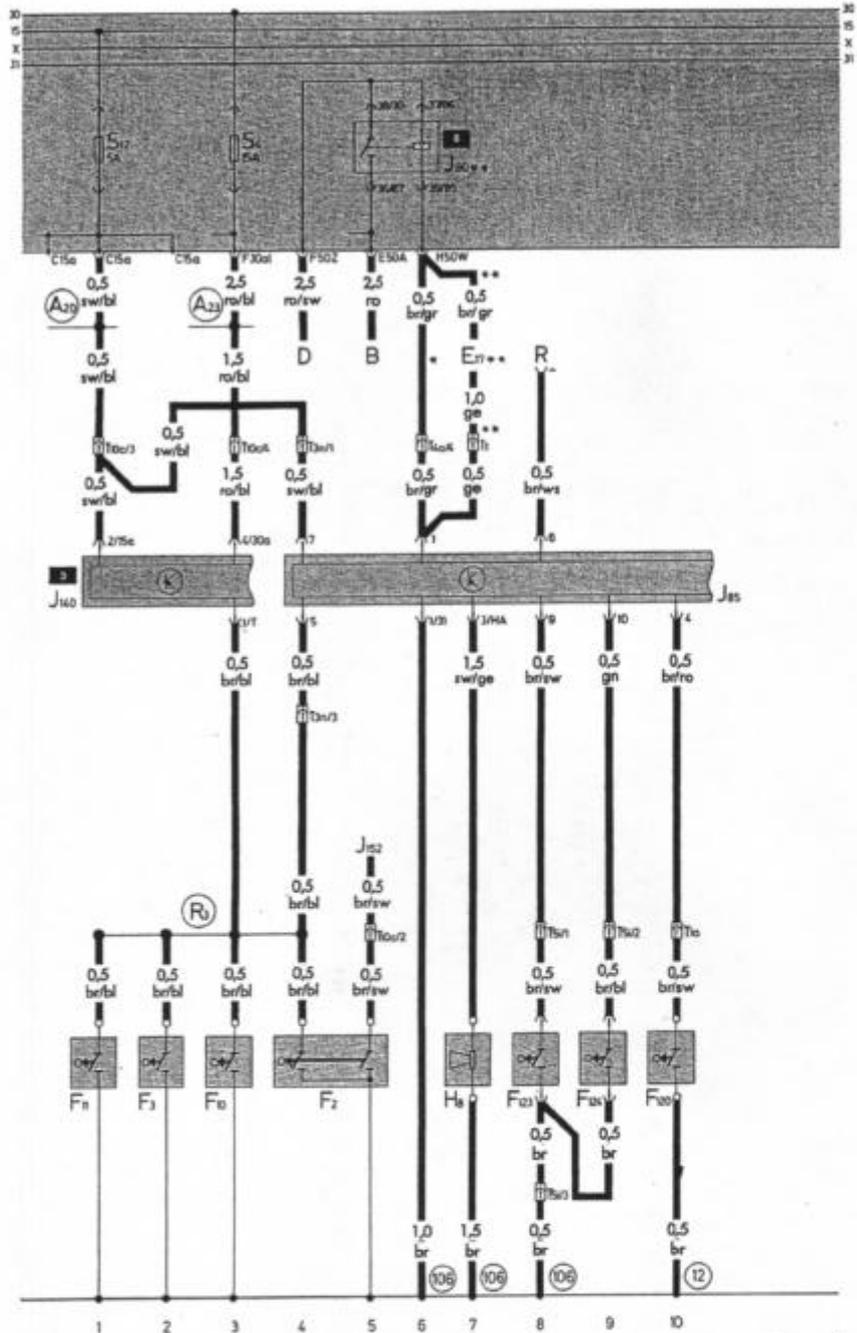

ro = red
 sw = black
 br = brown
 ge = yellow
 gn = green
 bl = blue
 gr = grey
 ws = white
 li = purple

97-5698


- B - Starter
- D - Ignition/starter switch
- E 17 - Starter inhibitor and reversing lights switch
- F 2 - Front left door contact switch with buzzer contact
- F 3 - Front right door contact switch
- F 10 - Rear left door contact switch
- F 11 - Rear right door contact switch
- F 120 - Bonnet contact switch for anti-theft alarm
- F 123 - Tailgate contact switch for anti-theft alarm
- F 124 - Tailgate lock cylinder contact switch for anti-theft alarm
- H 8 - Horn for anti-theft alarm
- J 60 - Automatic gearbox relay
- J 85 - Alarm system control unit
- J 140 - Switch unit for interior light delay
- J 152 - Buzzer for side lights and radio
- R - Connection for radio/radio with incorporated fader control
- S 4 - Fuse in relay plate
- S 12 - Fuse in relay plate
- T 1 - Connector single, yellow, behind dash panel

- T 1a - Connector single, green, behind dash panel
- T 3n - Connector 3 pin, red, behind relay panel
- T 4a - Connector 4 pin, behind dash panel
- T 5i - Connector 5 pin, black, behind dash panel
- T 10c - Connector 10 pin, black, behind dash panel

- (12) - Earth point, in engine compartment, left
- (106) - Earth connection in anti-theft warning system wiring loom
- (A20) - Connection (15a), in dash panel wiring loom
- (A23) - Connection (30a1), in dash panel wiring loom
- (R3) - Connection (door contact switch, right and left, in window lifter/central locking system and door contact switch wiring loom)

* - only with manual gearbox
 ** - only with automatic gearbox

Anti-theft alarm system

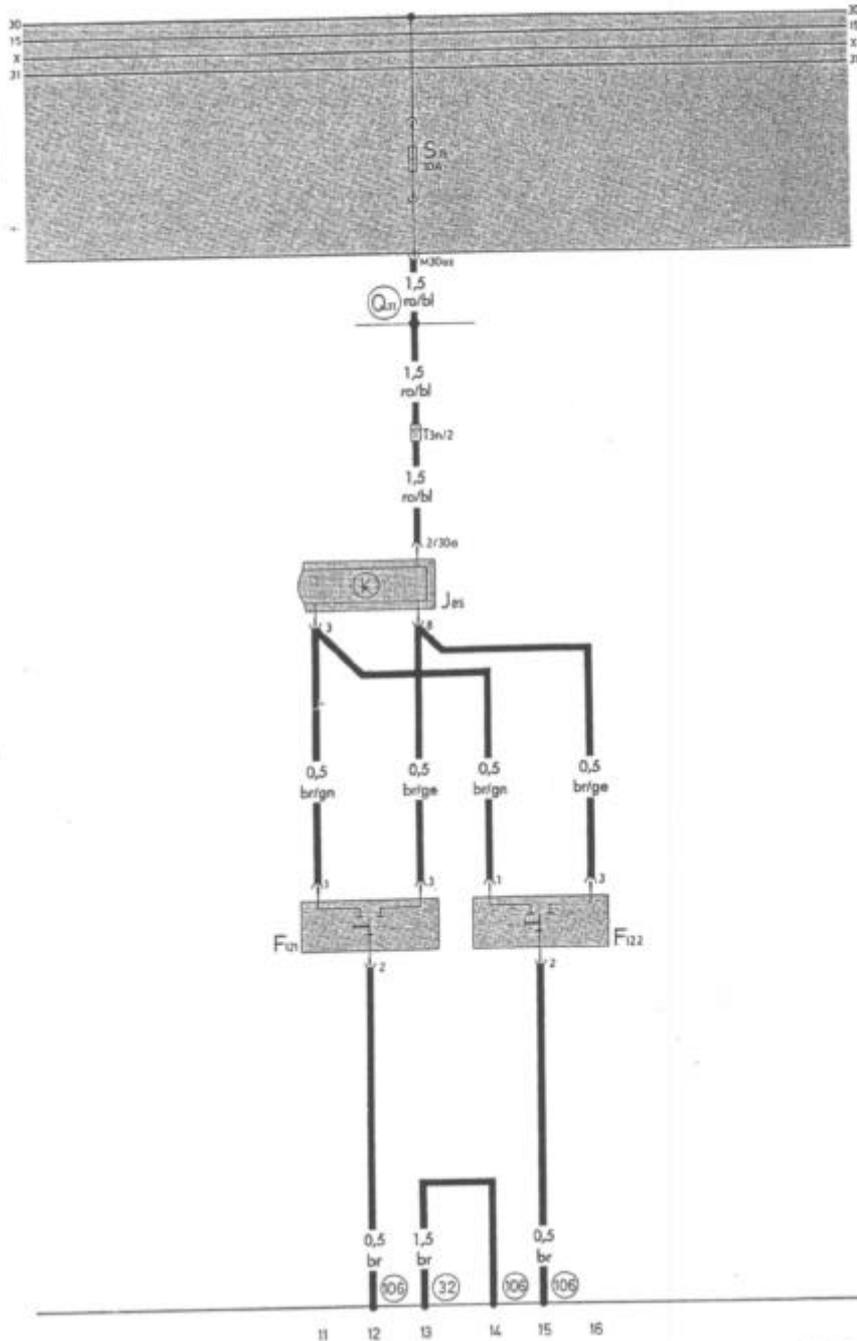

ro = red
 sw = black
 br = brown
 ge = yellow
 gn = green
 bl = blue
 gr = grey
 ws = white
 li = purple

- F 121 - Driver's door handle switch for anti-theft alarm
- F 122 - Passenger door handle switch for anti-theft alarm
- J 85 - Alarm system control unit
- S 19 - Fuse in relay plate
- T 3n - Connector 3 pin, red, behind dash panel
- (32) - Earth point, behind dash panel, left
- (106) - Earth connection in anti-theft warning system wiring loom
- (Q11) - Positive (+) connection (30az), in window lifter/central locking and door contact switch wiring loom